### product data

#### A REVOLUTION IN MICROWAVE FREQUENCY ANALYSIS

- Speed: 250k measurements/s to internal memory
- CW and burst measurement of frequency & power
- Resolution: 14 digits display
- Statistical analysis including Histogram, trend & modulation domain display
- Frequency range: 27, 40, 46 or 60 GHz models
- Unique ease-of-use: Multiparameter display & graphical presentation of results
- USB & GPIB as standard
- Outstanding performance/price ratio
- 2 instruments in one Microwave Counter/Analyzer & 300 MHz general-purpose timer/counter

#### **Fastest Microwave Counter on** the Market

The new CNT-90XL Microwave Counter/ Analyzers set new milestones for microwave frequency counting and outperforms any microwave counter on the market regarding resolution, speed and acquistion time. The measurement speed is up to 250 000 frequency samples/s, for advanced statistical analysis.


It is intended for several applications, such as:

- Microwave link carrier calibration
- Satellite communication equipment testing
- YIG and VCO testing
- RF and microwave instrumentation calibration
- RF components and modules testing

Product features and benefits:

- Fast high-resolution frequency or power measurements, very short acquisition time of 25 ms (Auto) or zero (Manual)
- Burst measurements via Ext. arming
- High sensitivity (-33 dBm)
- Statistical processing and graphical
- histogram, trend and modulation display - Affordable microwave frequency counting


# CNT-90XL 60 GHz Microwave Counter/Analyzer

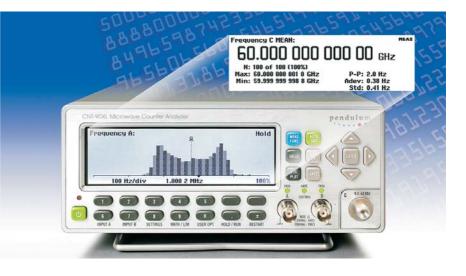



With the new CNT-90XL Microwave Counter/Analyzer, Pendulum Instruments now offers The Ultimate Tool for measurement, analysis and calibration of Microwave Frequency and Power. Whether in test systems, on the R&D bench, in the calibration lab or out in the field, the CNT-90XL is the state-of-the-art Microwave Counter/Analyzer and outperforms any existing Microwave counter on the market. The CNT-90XL is the worlds fastest Microwave counter with integrated power meter and offers a unique ease-of-use with graphical display and improved control over measurement at an outstanding price.


#### **Graphical Display**

The graphical display shows frequency changes over time directly on-screen, e.g. fast power switching or FM. Built-in statistical processing presents numerical stability data and also frequency distribution histograms on-screen for analysis of frequency stability or modulation.

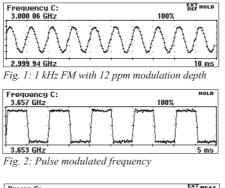

 

 

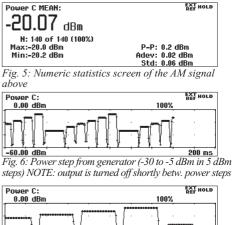

 


Figure 7: Power step (close up)



## CNT-90XL Specifications

The CNT-90XL performs measurements on inputs A (300 MHz), input B (300 MHz) and input C (27, 40, 46 or 60 GHz). The specification below only refers to the input C measurements of frequency and power. For the timer/counter measurements except Frequency on inputs A and B, as well as general CNT-90 data, please consult the CNT-90 data sheet **Measuring Functions** Frequency A, B, C Range: Input A, B. 0.001 Hz to 300 MHz Input C: 300 MHz to 27, 40, 46 or 60 GHz Resolution: 12 digits in 1s measuring time Acquisition: Input A, B: none Input C: Auto or Manual (within ±40 MHz) Acquisition time: 25 ms in Auto (typ.) Aux. Parameters: Input A, B: Vmax, Vmin, Vp-p Input C: Power C in dBm Period A, B (single or average), C (average) Range: Input A, B: 3.3 ns to 1000s Input C: 4 ns down to 37, 25, 22 or 17 ps **Resolution:** 100 ps (single); 12 digits/s (average) Acquisition: Auto or Manual (within ±40 MHz) Acquisition time: 25 ms in Auto (typ.) Aux. Parameters: Power C in dBm Ratio A/B, B/A, C/A, C/B  $(10^{-9})$  to  $10^{11}$ Range: Input Frequency: Input A, B: 0.1 Hz to 300 MHz 300 MHz to 27, 40, 46 or 60 GHz Input C: Aux Parameters: Freq 1, Freq 2 Power C Range: -35 dBm to +10 dBm Power: Frequency: 300 MHz to 27, 40, 46 or 60 GHz **Resolution:** 0.01 dBm @100ms measuring time Acquisition: Auto or Manual (within ±40 MHz) Acquisition time: 20 to 30 ms in Auto (typ.) Aux. Parameters: Frequency C Input Specifications Inputs A and B Frequency Range: DC-Coupled: DC to 300 MHz 10 Hz to 300 MHz AC-Coupled: 15mVrms (DC to 200MHz) 25mVrms (200 to 300MHz) Sensitivity: Attenuation: x1. x10 Dynamic Range (x1): 30 mV p-p to 10V p-p within ±5V window Analog Noise Reduction Filter: Nominal 100 kHz, RC-type. Digital Low Pass Filter: 1 Hz to 50 MHz cut-off frequency Impedance: 1 MQ // 20 pF or 50Q (VSWR<2:1)

#### Max Voltage Without Damage: 350V (DC + AC pk) to 440 Hz, fall-1 MΩ: ing to 12V rms (x1) at 1 MHz 12V rms 50 Q·

BNC

Connector:

Input C
---------

Input C		
Freq. Range:	0.25 to 27, 40, 46, 60 GHz	
	depending on model	
Operating input		
	-33 to +13 dBm	
18 to 20 GHz:	-29 to +13 dBm	
20 to 27 GHz:	-27 to +13 dBm	
27 to 40 GHz: 40 to 46 GHz:	-23 to +13 dBm -17 to +13 dBm	
46 to 60 GHz:	-15 to +10 dBm	
Impedance:	$50\Omega$ nominal, AC coupled	
VSWR:	5052 nominal, AC coupled	
	$\leq 2.0:1$ (typ.)	
27 to 46 GHz:	<2.0:1 (typ.)	
	<3.0:1 (typ.)	
FM tolerance:	±20 MHz (Auto acq.); ±50 MHz (Man.)	
AM tolerance:	Any modulation index (minimum sig- nal must be within sensitivity range)	
Automatic Amplitude Discrimination:		
10 dB separation between 2 signals within 30 MHz, 20 dB otherwise		
Max Voltage Wi	thout Damage:	
	+27dBm (27, 40, 46 GHz models)	
<i>c</i>	+25dBm (60 GHz model)	
Connector:		
27 GHz: 40 GHz:	SMA	
40 GHz: 46 GHz:	2.92 mm sparkplug female 2.92 mm sparkplug female	
40 GHz: 60 GHz:	1.85 mm sparkplug female	
	(all connectors are field replaceable)	
Auxiliary Fu	Inctions	
External Start	and Stop Arming	
External Start Arming can be u	and Stop Arming sed to synchronize the frequency and	
External Start Arming can be u power measurem	and Stop Arming	
External Start Arming can be u power measurem	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal.	
External Start Arming can be u power measurem Minimum burst lo <i>Modes:</i>	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs.	
External Start Arming can be u power measurem Minimum burst lo <i>Modes:</i>	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input)	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input)	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>p</i> Range:	
External Start Arming can be u power measurem Minimum burst la Modes: Input Channels: Start Time Delay	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>p</i> Range:	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10° samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> )	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>P</i> Range: 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> )	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>P</i> Range: 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> )	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10° samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> ) <b>ns</b> : 20 ns to 1000s	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time Timebase Refere	<ul> <li>and Stop Arming</li> <li>sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs.</li> <li>Start and Stop Arming</li> <li>A, B or E (Ext. Arming input)</li> <li><i>Range:</i></li> <li>20 ns to 2s, 10 ns resolution</li> <li>Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation</li> <li>Numeric, histograms or trend plots</li> <li>2 to 2 x 10<sup>9</sup> samples</li> <li>OFF or Capture values above/below/inside or outside limits</li> <li>(K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X<sub>0</sub>)</li> <li>ns</li> <li>: 20 ns to 1000s</li> <li><i>mee:</i> Internal, External or Automatic Freezes result, until a new measurement is initiated via Restart</li> </ul>	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time Timebase Referee Display Hold:	<ul> <li>and Stop Arming</li> <li>sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs.</li> <li>Start and Stop Arming</li> <li>A, B or E (Ext. Arming input)</li> <li><i>Range:</i></li> <li>20 ns to 2s, 10 ns resolution</li> <li>Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation</li> <li>Numeric, histograms or trend plots</li> <li>2 to 2 x 10<sup>9</sup> samples</li> <li>OFF or Capture values above/below/inside or outside limits</li> <li>(K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X<sub>0</sub>)</li> <li>ns</li> <li>: 20 ns to 1000s</li> <li><i>mee:</i> Internal, External or Automatic Freezes result, until a new measurement is initiated via Restart</li> </ul>	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time Timebase Refere Display Hold:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> ) <b>ns</b> : 20 ns to 1000s <i>mee:</i> Internal, External or Automatic Freezes result, until a new measure- ment is initiated via Restart <i>int Set-ups:</i> 20	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time Timebase Refere Display Hold: Stored Instrumed Display:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> ) <b>ns</b> : 20 ns to 1000s <i>mce:</i> Internal, External or Automatic Freezes result, until a new measure- ment is initiated via Restart <i>mt Set-ups:</i> 20 Backlit graphics LCD; 320*97 pixels GPIB (!EEE 488.2, SCPI) and USB	
External Start Arming can be u power measurem Minimum burst le Modes: Input Channels: Start Time Delay Statistics Functions: Display: Sample Size: Limit Qualifier: Mathematics Functions: Other Function Measuring Time Timebase Refere Display: Stored Instrumen Display: Interfaces: Max. measuring s To PC:	and Stop Arming sed to synchronize the frequency and ents with the start of a burst signal. enght must exceed 10µs. Start and Stop Arming A, B or E (Ext. Arming input) <i>Range:</i> 20 ns to 2s, 10 ns resolution Maximum, Minimum, Mean, Amax-Min, Standard Deviation and Allan Deviation Numeric, histograms or trend plots 2 to 2 x 10 <sup>9</sup> samples OFF or Capture values above/be- low/inside or outside limits (K*X+L)/M and (K/X+L)/M. X is current reading and K, L and M are constants; set via keyboard or as frozen reference value (X <sub>0</sub> ) <b>ns</b> : 20 ns to 1000s <i>mce:</i> Internal, External or Automatic Freezes result, until a new measure- ment is initiated via Restart <i>mt Set-ups:</i> 20 Backlit graphics LCD; 320*97 pixels GPIB (!EEE 488.2, SCPI) and USB	

### **INLAY to Product Data CNT-90**

General Specifications		
Environmental	l Data	
Class:	MIL-PRF-28800F, Class 3	
Operating Temp:	$0^{\circ}$ C to $+50^{\circ}$ C	
Storage Temp:	-40°C to +71°C	
Humidity:	5%-95% (10°C-30°C) 5%-75% (30°C-40°C) 5%-45% (40°C-50°C)	
Altitude:	4 600m	
Vibration:	Random and sinusoidal according to MIL-PRF-28800F, Class 3	
Shock:	Half-sine 30G per MIL-PRF-28800F Bench handling	
Transit drop test: According to MIL-PRF-28800F		
Safety:	EN 61010-1, pollution degree 2, meas cat I, CSA C22.2 No 1010-1, CE	
EMC:	EN 61326 (1997); A1 (1998), in- creased test levels according to EN 50082-2, Group 1, Class B, CE	
Mains power:	90 to 265V rms, 45 to 440 Hz, <40W	
Dimensions and Weight		
Width x Height x	<i>Depth:</i> 210x90x395 mm (8.25x3.6x15.6 in)	
Weight:	Net 2.7 kg (5.8 lb), Shipping app. 3.5 kg (app. 7.5 lb)	
Ordering Information		
Basic Models		
CNT-90XL-27G	27 GHz Microwave Counter/Analyzer incl. Standard Time Base	
CNT-90XL-40G	40 GHz Microwave Counter/Ana- lyzer including Standard Time Base	
CNT-90XL-46G	46 GHz Microwave Counter/Ana- lyzer including Standard Time Base	
CNT-90XL-60G	60 GHz Microwave Counter/Ana- lyzer including Standard Time Base	
Included with Ins	<i>trument:</i> 18 months product warranty, line cord, user documentation on CD, and Certificate of Calibration	
Time Base Options		
<b>Option 30/90</b>	Very High Stability Oven Time Base; 0.01 ppm/month	
<b>Option 40/90</b>	Ultra High Stability Oven Time Base; 0.003 ppm/month	
Optional Accessories		
<b>Option 22/90</b>	Rack-Mount Kit	
<b>Option 27</b>	Carrying Case - soft	
<b>Option 27H</b>	Heavy-duty Hard Transport Case	
Option 29/90	TimeView Modulation domain Analysis SW for CNT-90XL	
<b>Option 90/01</b>	Calibration Certificate with Proto- col; Standard oscillator	
<b>Option 90/06</b>	Cal. Cert.; Oven oscillator	
<b>Option 90/00</b>	Cal. Cert. Frequency ageing/week	
Option 95/05	3 years extended warranty	
Option 95/05	5 years extended warranty	

Specifications subject to change without prior notice

4031 601 90101 - rev. 02 October2006

**US: Pendulum Instruments Inc** 

5811 Racine Street; Oakland, CA 94609-1519, USA Voice:(510)-428-9488 Fax: (510)-428-9469

International: Pendulum Instruments AB

PO Box 20020, SE-16102 Bromma, Sweden Voice: +46 8 598 51057 Fax:+46 8 598 51040

Pendulum Instruments www.pendulum-instruments.com - Experts in time & frequency calibration,

measurement and analysis